




Standard Telecaster® 4 Way Switch

Key


-  Solder joint
-  Ground connection. Usually soldered to rear of volume pot

4 Way Selector Positions-

1. Bridge
2. Bridge & Neck in parallel
3. Neck
4. Bridge & Neck in series

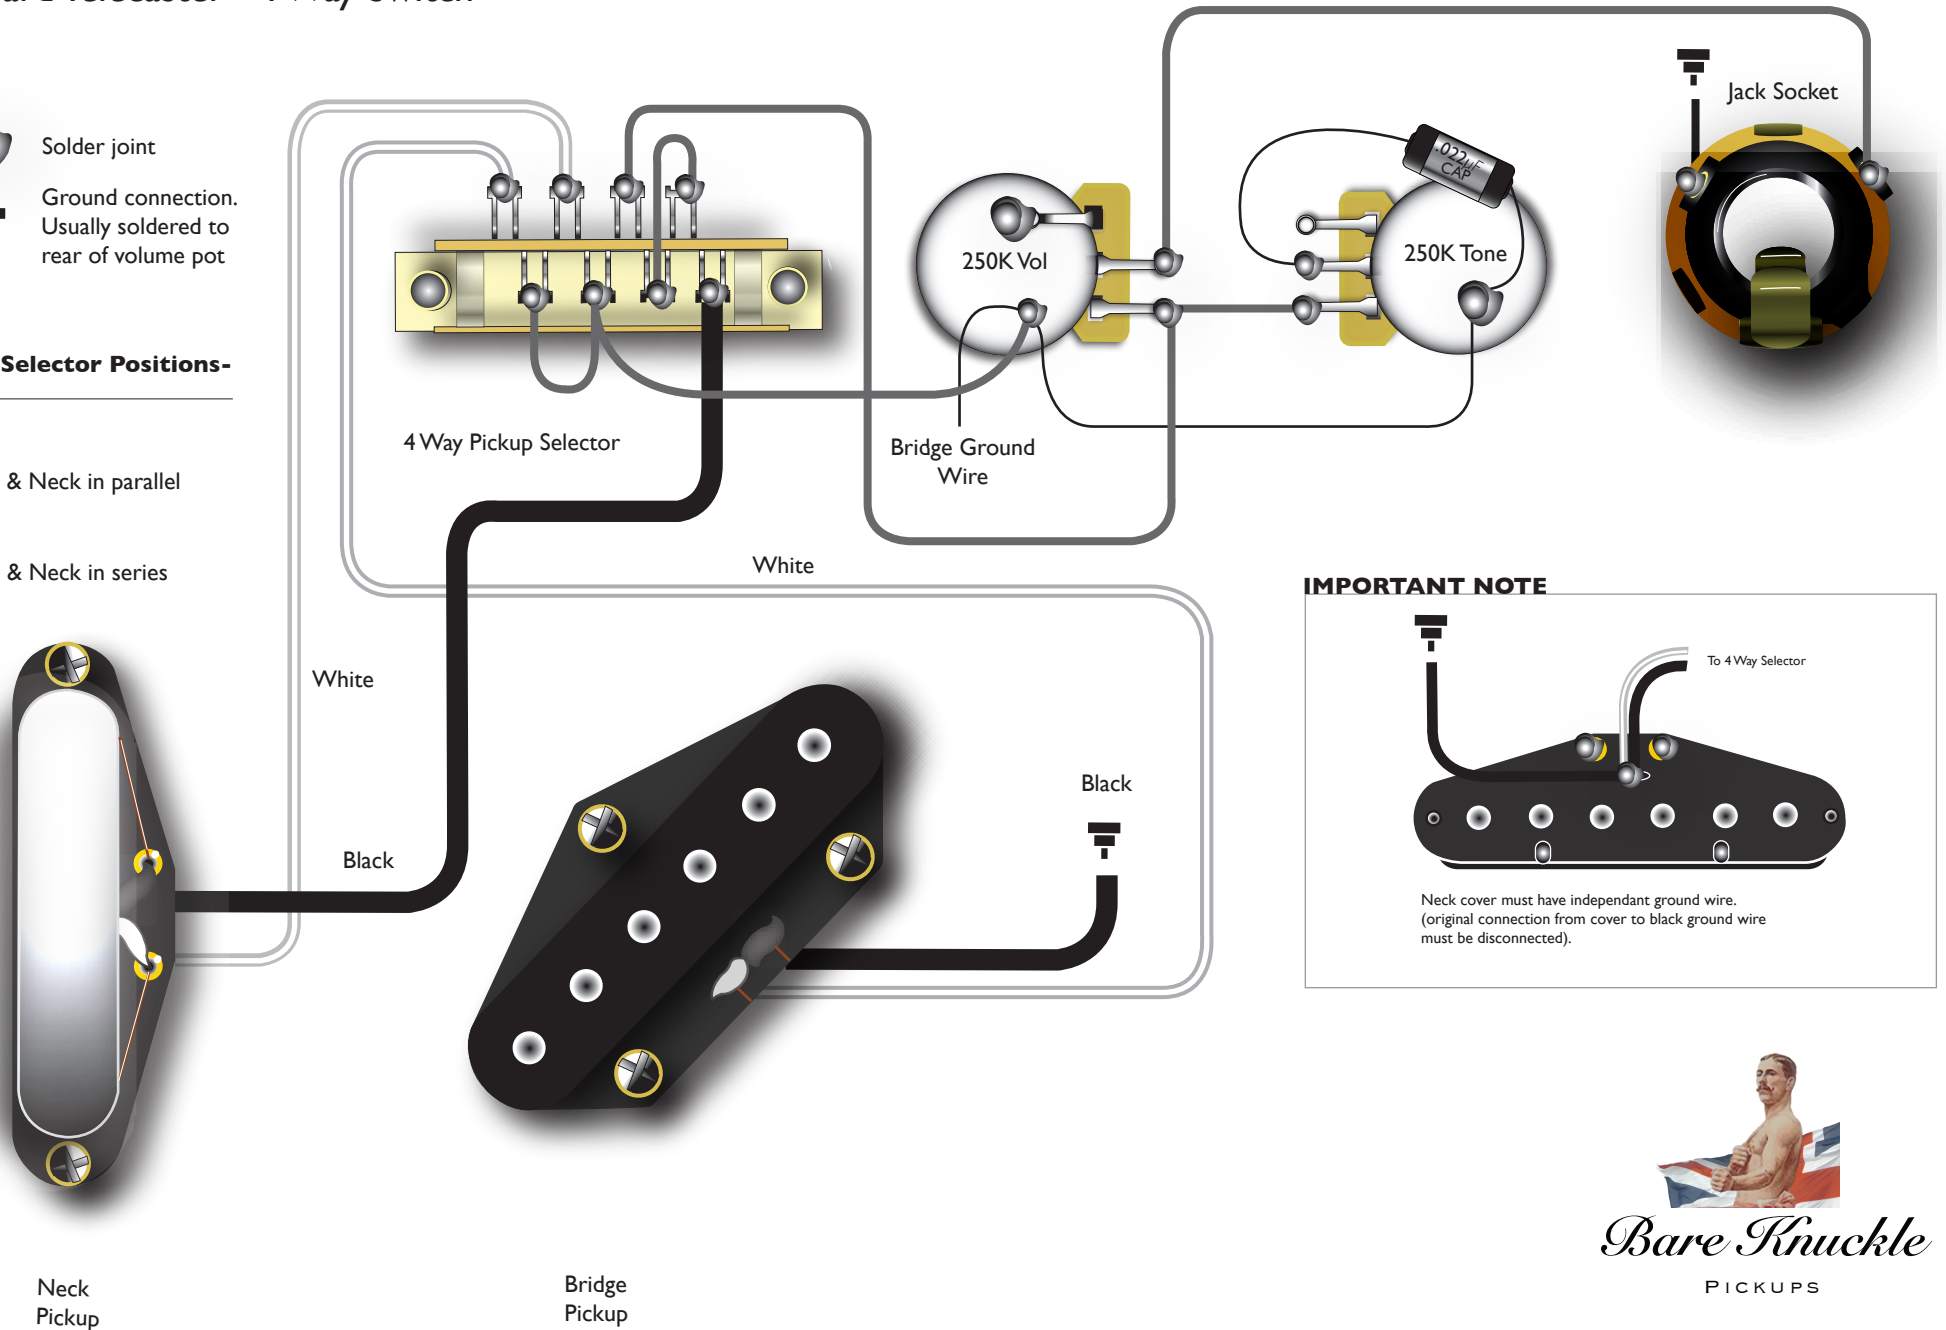

IMPORTANT NOTE

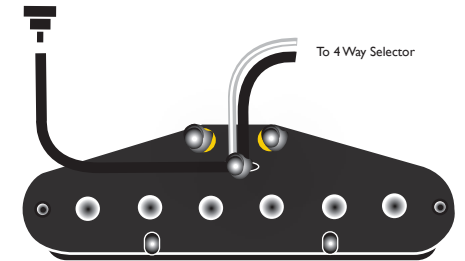

Neck cover must have independent ground wire.
(original connection from cover to black ground wire must be disconnected).



Bare Knuckle
PICKUPS