
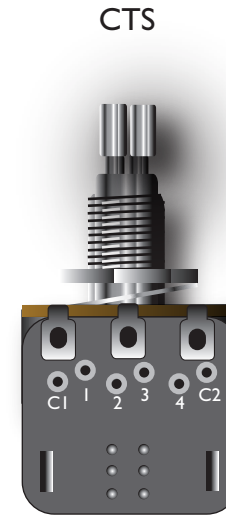
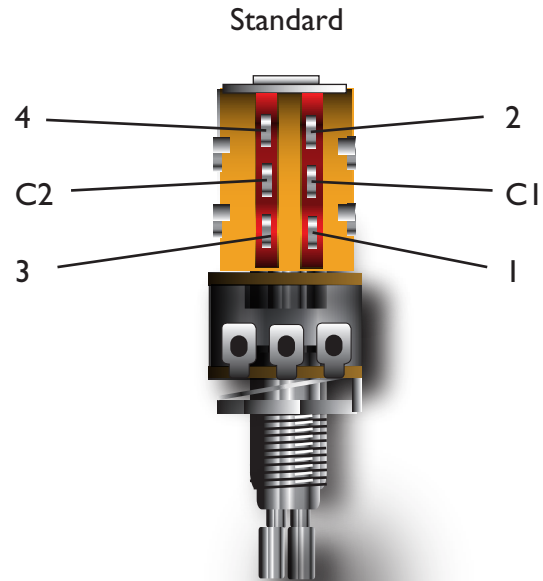


Push-Pull Potentiometer Conversion Guide

Key

 Solder joint

 Ground connection.
Usually soldered to rear of volume pot



Switch pulled UP - C1 connects to 1, C2 connects to 3
Switch pushed DOWN - C1 connects to 2, C2 connects to 4



Bare Knuckle
PICKUPS